

# exway

Exway X1 Riot PRODUCT MANUAL



iOS

 
 


Android

Exway APP

Scan the QR code for more details

- ① Front of The Board
- ② Waterproof Grip Tape (Do not ride in the rain when it's broken)
- ③ Rear of The Button
- ④ Truck
- ⑤ Heat Sink
- ⑥ Power Button
- ⑦ Charge Port
- ⑧ Rear Drive Wheel

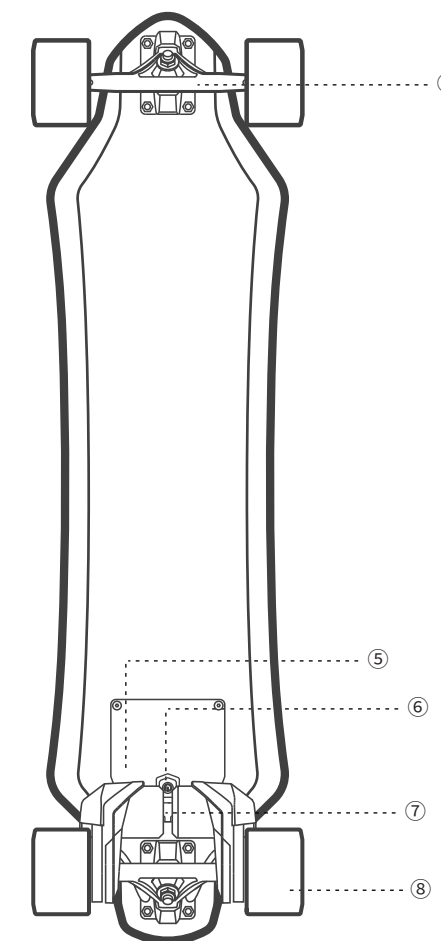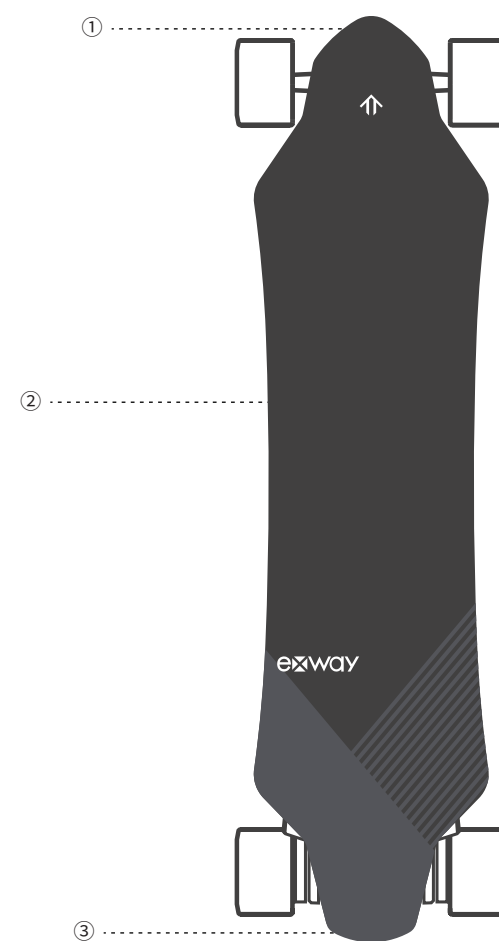

Max. Speed: 45km/h  
 Max. Climbing Grade: 30% / 16.8°  
 Range: 25km  
 (Actual data varies depending on rider weight and riding conditions.)

Gross Weight: 7.3±0.2kg  
 Torque: 5.2Nm × 2  
 Maximum Power: 1500W × 2  
 Rated Motor Power: 750W × 2  
 Rated Charger Power: 75W  
 Input Voltage: 100-240VAC,50/60Hz  
 Battery Capacity: 193Wh  
 Charging Time: 2h 45min  
 Truck: Seismic Aeon 45°  
 Braking Mode: Regenerative Braking  
 Applicable Age Range: 16 ~ 50 Years old  
 Maximum Load: 200kg / 440lbs  
 Water Proof Level: IP55

## The state of the indicator lights:

- Green light  
The board turned on/Pairing
- Red Light  
Charging
- Flashing red and green lights  
Pairing
- Flashing red light  
Low Battery (Fast)  
Disconnection(Low)

## ! SAFETY WARNING:

 
1. When the skateboard battery has 5% left, the power output will be cut off to better protect the battery. (In free mode, both the power output and brakes will be restricted)
2. Connect the magnetic port on the charger to the power button on the board before plugging into the wall outlet. (Only use an original Exway charger)

## ! SPECIAL NOTES:

1. The Exway board can be fully charged in about 2 hours 45 minutes. When fully charged, the battery charger indicator light is green.
2. Please refer to the Exway APP or the official website for the latest version of the product manual



- ① Accelerating(Roll the remote wheel forward)
- ② Roller
- ③ Braking (Roll the remote wheel backward)
- ④ Multifunctional Button A
- ⑤ OLED Screen

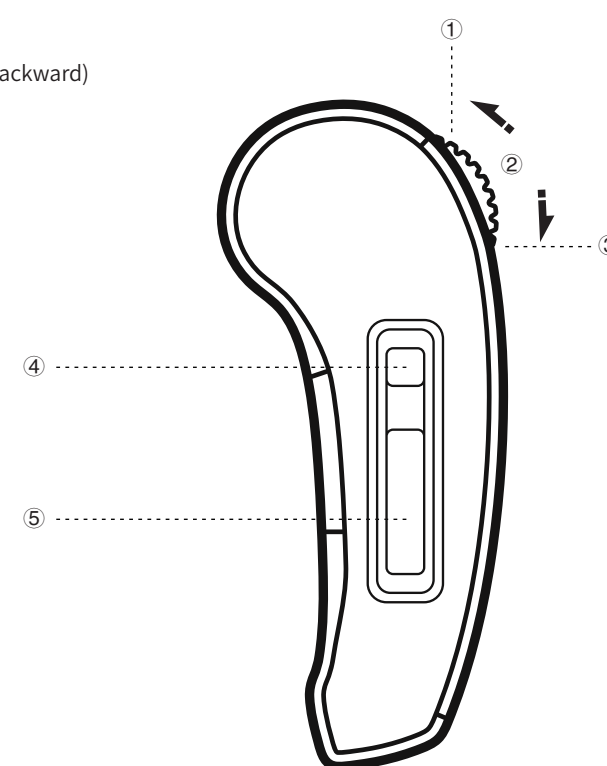

Screen: OLED 0.9 inch  
 Wireless Solution: 2.4GHz  
 Input Voltage: 5V → 1A

## How to operate the remote:

- Long press button A for 3S to turn it on
- Roll the remote wheel forward to accelerate and roll the remote wheel back to brake
- Short press A to switch gears
- Short press button A for 3 times to switch directions

## How to RE-PAIR the remote and the Exway board:

01. Completely turning off the Exway board and then longpress the board's power button for 8S to enter into pairing mode
02. Long press the remote button A for 5S, entering into the setting mode
03. Choose the first option "RE-PAIR"
04. Choose the corresponding Exway board and then "YES"

## Product List:

- Exway X1 Riot
- Belt ×2
- T Skate Tool
- 2.0mm Allen Wrench
- 2.5mm Allen Wrench
- 5.0mm Allen Wrench
- Remote
- Charger
- Product Manual

## Security Warning & Disclaimer

1. Please read and understand the user manual before riding your Exway electric skateboard. You are responsible for the operation and control of the electric skateboard and you must know how to control it before you ride.
2. Riding an Exway electric skateboard is extremely dangerous. Whenever you ride your Exway board you risk great bodily injury, disability, or death from loss of control, collision, or falls.
3. The Exway electric skateboard can lose connection with the remote control. If this happens the skateboard becomes a non motorized longboard. Please always ride within your ability to control the board in case power loss occurs. Prepare to lose your ability to brake at any time.
4. Skate only in an open area free from vehicles and pedestrian traffic, and other physical obstacles. You are responsible for learning the basic features of the board such as braking, accelerating, and switching gears. Always wear a helmet and full protective gear while riding.
5. Do not ride on slippery or uneven surfaces. Only ride in areas with good visibility. Avoid riding in close proximity to vehicle and pedestrian traffic.
6. The Exway electric skateboard is not a toy and is not intended for children under 16.
7. Please refer to the Exway APP or the official website for the latest version of the product manual.

## FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
 (1) This device may not cause harmful interference, and  
 (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
 Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Please log onto  
[www.exwayboard.com](http://www.exwayboard.com) or follow Exway App  
 for more information.